

# Slim

IT Istruzioni d'uso

EN Instructions for use

FR Notice d'emploi

DE Gebrauchsanleitung

ES Instrucciones de uso

BR-PT Instruções para uso

NL Gebruiksaanwijzing

DK Brugsanvisning

FI Käyttöohjeet

CZ Návod na použití

SK Návod na použitie

HU Használati útmutató

 
SL Navodila za uporabo

RU Инструкции по пользованию

TR Kullanım kılavuzu

HR/SRB/MNE/BiH Upute za uporabu



EL Οδηγίες χρήσεως

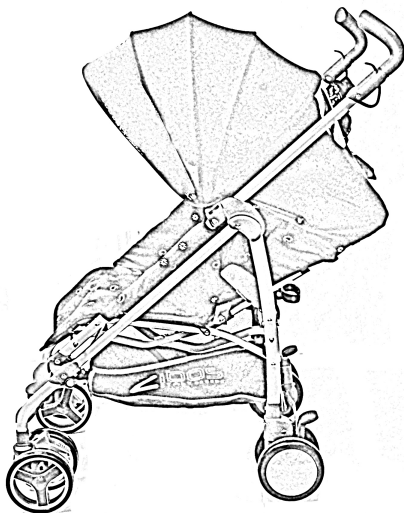



EN1888-2012

nielsen  
ITALY DESIGN


 
 
1

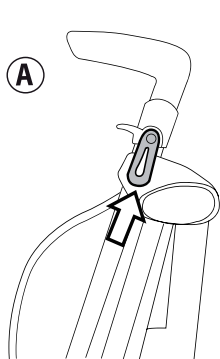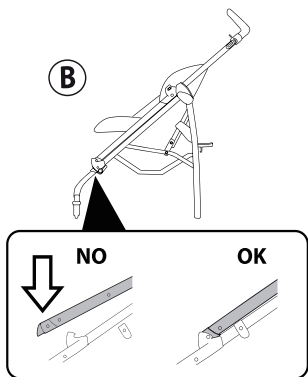**B**

  2

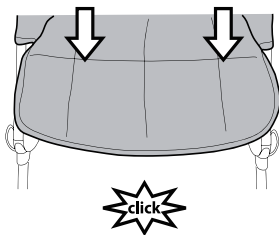
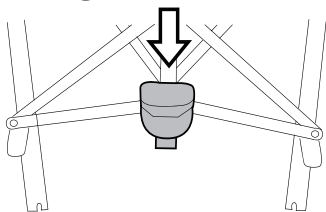
**D****E**

   3

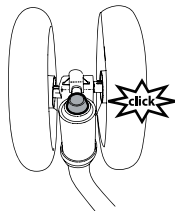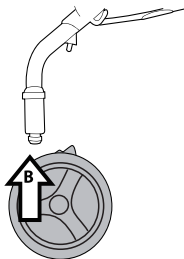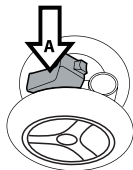


4

  A

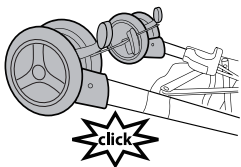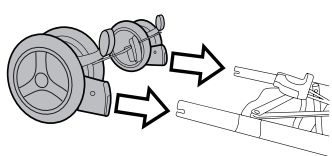


B

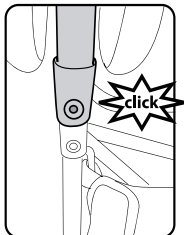 


5

 
A

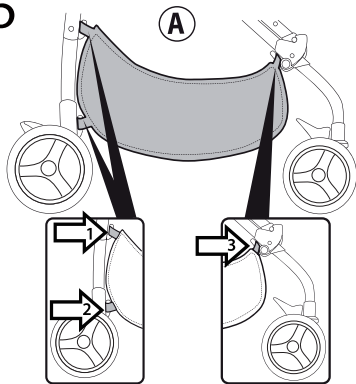

B

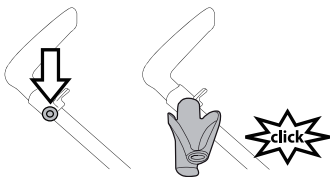 


C

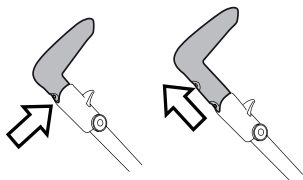 


6


 
A

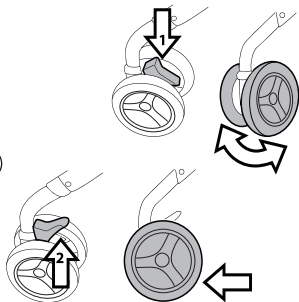


B

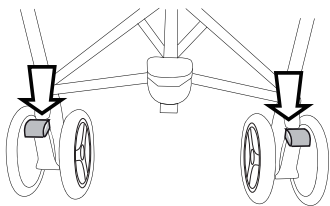 


7

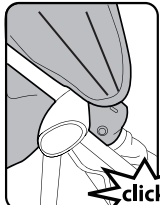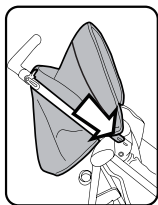  




A

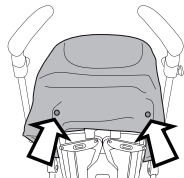 




B

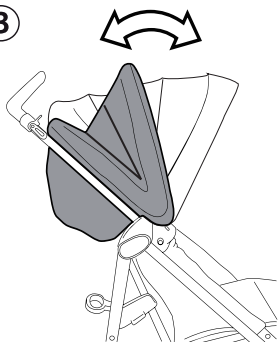 


8

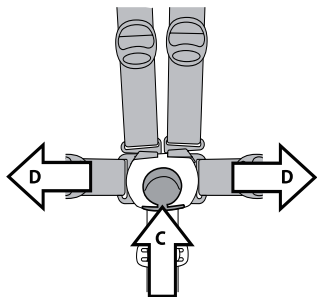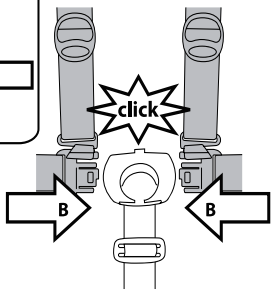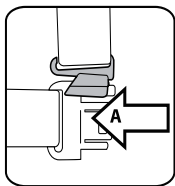   


9

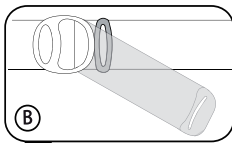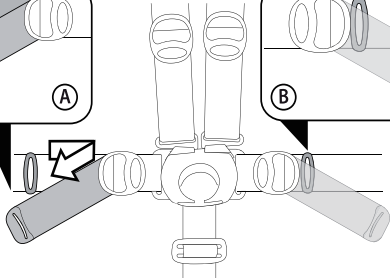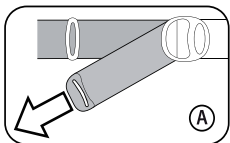   


10

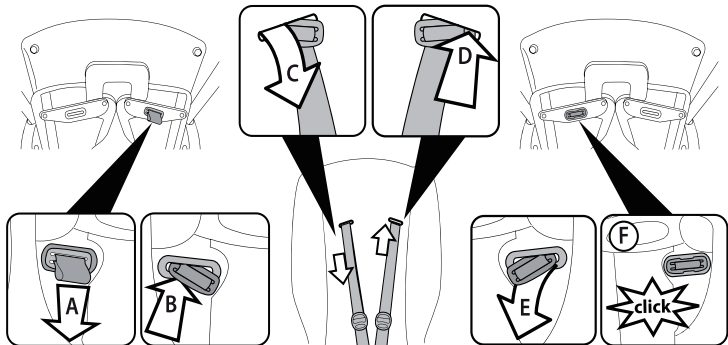 

11

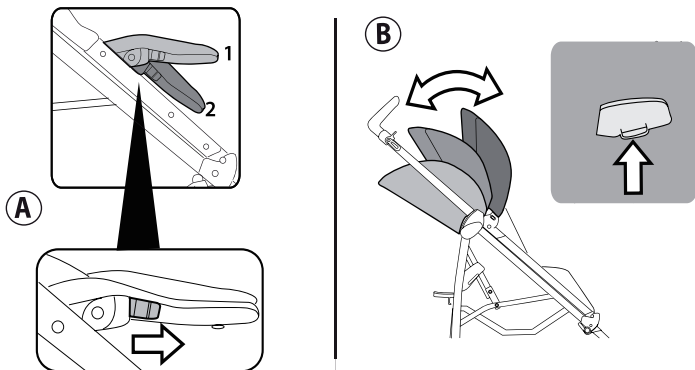 


12

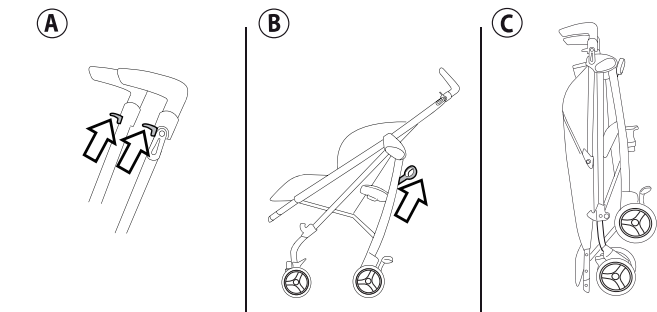 


13

 A

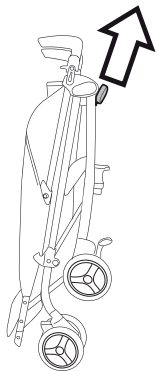


B

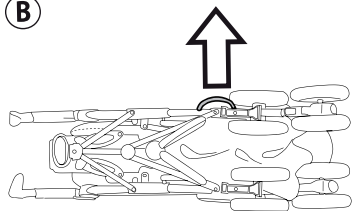 


14

 
1

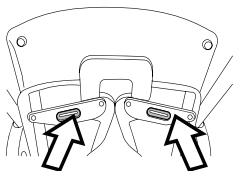

2

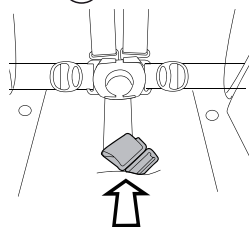 


3

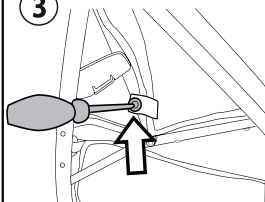 


15

 
4

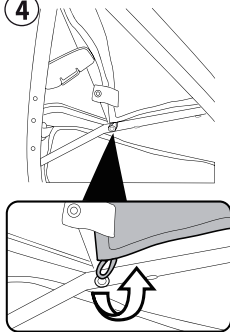



5

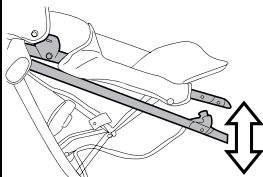 




6

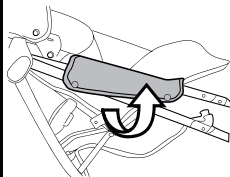 

16

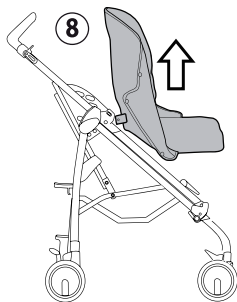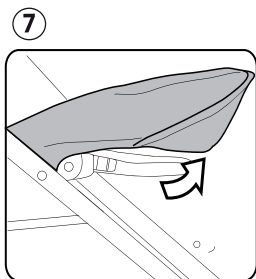  

17

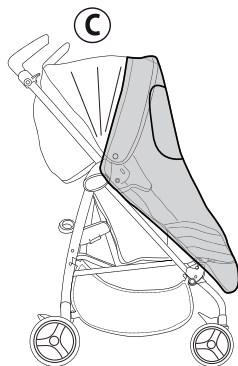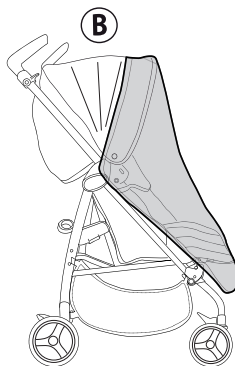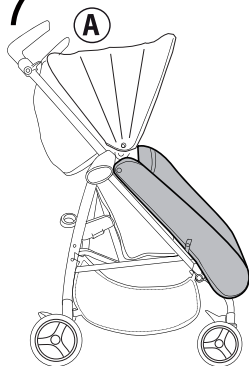   

## SLIM

## ! WARNING

- CAREFULLY READ INSTRUCTIONS AND KEEP FOR FUTURE USE. THE CHILD'S SAFETY COULD BE PUT AT RISK IF THE INSTRUCTIONS ARE NOT FOLLOWED.
- THIS PRODUCT IS DESIGNED FOR A CHILD WHOSE MAXIMUM WEIGHT IS 45 POUNDS (20 KG) AND WHOSE MAXIMUM HEIGHT IS 43 INCHES (110 CM). THIS SHOPPER BASKET IS DESIGNED TO CARRY A MAXIMUM WEIGHT OF 11 POUNDS (5 KG). ANY CUP HOLDER EVENTUALLY PROVIDED WITH THIS UNIT IS DESIGNED TO CARRY A MAXIMUM WEIGHT SPECIFIED ON THE CUP HOLDER ITSELF. ANY POUCH OR POCKET PROVIDED WITH THIS UNIT IS DESIGNED TO CARRY A MAXIMUM WEIGHT OF 0.44 POUNDS (0.2 KG)
- FAILURE TO FOLLOW MANUFACTURER'S SPECIFICATIONS OR USE OF ACCESSORIES OTHER THAN THOSE APPROVED BY THE MANUFACTURER MAY CAUSE THE UNIT TO BECOME UNSTABLE.
- AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE COMPLETE 5 POINT SEAT BELT.
- NEVER LEAVE YOUR CHILD UNATTENDED.
- ALWAYS USE ALL THE BRAKES WHENEVER PARKED.
- TO AVOID SERIOUS INJURY, WHEN MAKING ADJUSTMENTS ENSURE THE CHILD'S BODY IS CLEAR OF ALL MOVING PARTS.
- ALL OPERATING AND ASSEMBLY PROCEDURES SHOULD BE PERFORMED BY AN ADULT.
- ENSURE THAT THE STROLLER IS OPENED CORRECTLY AND LOCKED IN POSITION OF USE.
- DO NOT DRIVE THIS PRODUCT AROUND STAIRS OR STEPS; CARE MUST BE TAKEN IF UNIT IS USED ON STAIR OR ESCALATORS.
- DO NOT USE THE PRODUCT IF IT HAS BROKEN OR MISSING PARTS.
- DO NOT USE NEAR FIRE OR EXPOSED FLAME.

## INSTRUCTIONS

1. OPENING: to open the stroller, unhook the left hand side lever (fig\_A), hold the handles and pull till the hooks are well secured (fig\_B).
2. If the hooks are secured properly, press the seat downwards (fig\_D) until they click into place. Finally, press downwards on PUSH with your foot (fig\_E).
3. ASSEMBLING: to mount the front wheels, firstly check that the washer is present, as shown in the figure, then lower lever A and slip wheels B on until it clicks into place.
4. To mount the rear wheels connected by the brake cable, place them with the brake facing externally (fig\_A).

WARNING: ensure the hooks have clicked into place, as in figure b.

5. BASKET: to mount the basket, slip the loops over the rear hook 1 and 2 and the front hook 3 (fig\_A).

CUP HOLDER: It can only be fitted to the right hand side of the stroller, using the clip which is already present on the chassis. To fit the cup holder, push until it clicks into place (fig\_B).

ADJUSTING THE HANDLES: The height of the handles can be adjusted. Press the little button behind the handles and pull upwards. To lower the handles, do the opposite.

6. SWIVEL WHEELS: In order to make the wheels swivel, the lever (arrow 1) must be lowered. To secure the wheels, move the lever to the opposite direction (arrow 2). The rear wheels are fixed.

BRAKE: to set the brake on the stroller, lower the lever on the rear wheel until with your foot. To release the brake, lift the lever (fig\_B). When stationary, always apply the brake.

7. HOOD: To fit the hood, click the fasteners onto the appropriate points and button down the hood on the rear of the stroller's backrest (fig\_A). The hood can be set to 2 positions (fig\_B), simply by pulling it backwards or forwards.

8. 5-POINT SAFETY HARNESS: to fasten, inset two buckles of the waist strap (with attached shoulder straps, arrow A) into the leg divider strap until they click into place (arrow B). To unfasten, push the round button placed in center of the buckles upwards (arrow C) and put the waist strap outwards (arrow D).

9. To tighten the waist strap, pull on both sides in the direction of the arrow (fig\_A). To loosen it do the opposite. The waist strap can be tightened as far as the safety lock (fig\_B).



10. To adjust the height of the safety harness, release the two buckles on the rear of the backrest. Pull the shoulder straps towards you until the buckles are released and insert them in the backrest loops. Remove the shoulder straps from the sack and insert them in the most appropriate buckle, then reattach the two buckles behind the backrest. The buckles are securely attached when a click is heard.

11. **LEG REST ADJUSTMENT:** The leg rest can be set in 2 different positions. To lower the leg rest, pull the two side levers downwards and at the same time lower the leg rest. To raise the leg rest, push it upwards until it clicks into position.

**BACKREST ADJUSTMENT:** The backrest can be set in 3 positions: To lower the backrest, lift the levers on both sides at the same time and lower it, locking it in the position required. To lift the backrest, push it upwards.

12. **FOLDING UP:** Put one lever followed by the second lever upwards until you hear them click (fig\_A); then hold the central handle (fig\_B) and put it upwards until the stroller folds up. When folded, the stroller will stand upright (fig\_C).

13. **CARRYING:** The stroller can be conveniently carried (with the front wheels set on stationary) by the central handle (fig\_A). It can also be carried by the side handle (fig\_B).

14. **REMOVABLE LINING:** To remove the lining from the stroller, unhook the fasteners on the rear of the backrest (fig\_1), slip the fastener of the leg divider out from under the seat (fig\_2), loosen the two screws (on both sides) using a screwdriver to keep the nut fastened (fig\_3).

15. Unhook the elastic from the chassis (fig\_4), unhook the chassis (fig\_5, see **OPENING** paragraph, point 1), and slide the sack off the chassis (fig\_6).

16. Slide the sack off the footboard (fig\_7) and pull the sack upwards (fig\_8).

17. **ACCESSORIES:** This stroller may include some accessories as foot cover and rain cover as indicate fig\_a-b-c.

## CLEANING AND MAINTENANCE

**PRODUCT MAINTENANCE:** Protect from the weather: water, rain, or snow; prolonged and continuous exposure to bright sunlight may give rise to color changes of various different materials; store this product in a dry place.

**CLEANING THE CHASSIS:** Periodically clean all plastic parts with a damp cloth. Do not use solvent or similar cleaning products; keep all metal parts dry to prevent rusting; keep moving parts clean (adjustment mechanisms, locking mechanisms, wheels...) and free of dust and sand and, if necessary, lubricate with light machine oil.

**CLEANING THE RAN CANOPY:** Wash with a sponge ad soapy water; do not use detergents.

**CLEANING FABRIC PARTS:** Brush fabric parts to remove dust and wash by hand at a maximum temperature of 30°C; do not wring; do not use chlorine bleach, do not iron; do not dry clean; do not apply solvent- based stain removers and do not dry in tumble dryer.

There are 5 symbols at the last in this manual.

**! ATTENZIONE**

- LEGGERE ATTENTAMENTE LE ISTRUZIONI E CONSERVARE PER USO FUTURO. La sicurezza del bambino potrebbe essere messo a rischio se le istruzioni non sono seguite correttamente.
- Questo prodotto è progettato per bambini di peso massimo di 45 libbre (20 kg) e la cui altezza massima è di 43 pollici (110 cm). Il cestino è progettato per sopportare un peso massimo di 11 libbre (5 kg). Il porta bottiglie fornito con questa unità è progettato per sopportare un peso massimo specificato sullo stesso. Qualsiasi tasca o sacca è progettata per sopportare un peso massimo di 0,44 libbre (0,2 kg)
- LA MANCATA OSSERVANZA DELLE SPECIFICHE O USO DI ACCESSORI DIVERSI DA QUELLI APPROVATI DAL Costruttore può provocare instabilità.
- PER EVITARE LESIONI GRAVI da caduta. UTILIZZARE SEMPRE LE CINTURE A 5 PUNTI.
- NON LASCIARE MAI il bambino incustodito.
- UTILIZZARE SEMPRE TUTTI I FRENI QUANDO parcheggiato.
- PER EVITARE GRAVI LESIONI, QUANDO SI EFFETTUANO REGOLAZIONI, ASSICURARSI che il corpo del bambino sia distante da qualsiasi parti in movimento.
- TUTTE LE MODALITÀ DI FUNZIONAMENTO E MONTAGGIO devono essere eseguite da un adulto.
- Verificare che il passeggino sia APERTO CORRETTAMENTE e bloccato in posizione di impiego.
- NON GUIDARE IL PRODOTTO VICINO SCALE o gradini; CURA deve essere assunta se L'UNITÀ E' USATA SU SCALE o scale mobili.
- NON UTILIZZARE IL PRODOTTO SE CI SONO ROTTURE o parti mancanti.
- NON UTILIZZARE VICINO A FUOCO O FIAMME LIBERE.

**ISTRUZIONI**

1. APERTURA: per aprire il passeggino, sganciare la leva laterale (fig\_A) del lato sinistro, tenere le maniglie e tirare fino a quando i ganci dei tubolari siano serrati (fig\_B).
2. Se i ganci sono fissati correttamente, premere la seduta verso il basso (fig\_D) fino a quando non scattano in posizione. Infine, premere verso il basso con il piede (fig\_E).
3. MONTAGGIO: per montare le ruote anteriori, in primo luogo controllare che la rondella sia presente, come mostrato in figura, quindi abbassare la leva A ed infilare il gruppo ruote fino a quando non scatta in posizione.
4. Per montare le ruote posteriori collegati tramite il cavo del freno, posizionarle con il freno esternamente (fig\_A).

ATTENZIONE: assicurarsi che i ganci siano bloccati in posizione, come in figura b.

5. CESTELLO: per montare il cestello, infilare gli occhielli sul gancio posteriore 1 e 2 e il gancio anteriore 3 (fig\_A).

PORTA BICCHIERI: Può essere montato solo sul lato destro del passeggino, utilizzando la clip che è già presente sul telaio. Per montare il porta bicchiere, spingerlo fino a quando non scatta in posizione (fig\_B).

REGOLAZIONE DELLE MANIGLIE: L'altezza delle maniglie può essere regolata. Premere il piccolo pulsante dietro le maniglie e tirare verso l'alto. Per abbassare le maniglie, fare il contrario.

6. ruote girevoli: Al fine di rendere le ruote girevoli, la leva (freccia 1) devono essere abbassata. Per bloccare la rotazione delle ruote, spostare la leva nella direzione opposta (freccia 2). Le ruote posteriori sono fisse.

FRENI: per azionare il freno sul passeggino, abbassare con il piede la leva sulla ruota posteriore. Per rilasciare il freno, sollevare la leva (fig\_B). Da fermo, applicare sempre il freno.

7. CAPPOTA: Per montare la cappa, innestare le plastiche sui connettori del telaio ed abbottonare le clip sul retro dello schienale del passeggino (fig\_A). La cappotta può essere aperta o chiusa (fig\_B), semplicemente tirandola in avanti o indietro.

8. CINTURE DI SICUREZZA A 5 PUNTI: per il fissaggio, inserto due fibbie della cintura in vita (con spallacci attaccati, freccia A) nella cinghia sparti gambe fino a che non scattano in posizione (freccia B). Per slacciare, premere il pulsante rotondo posto al centro della fibbia verso l'alto (freccia C) e mettere la cintura verso l'esterno (freccia D).

9. Per tendere la cinghia centrale, tirare su entrambi i lati nella direzione della freccia (fig\_A). Per allentare fare il contrario. La cintura può essere serrata fino al blocco di sicurezza (fig\_B).

10. Per regolare l'altezza della cintura di sicurezza, rilasciare le due fibbie sul retro dello schienale. Tirare le bretelle verso di voi fino a quando le fibbie vengono rilasciate e inserirle nelle anse dello schienale. Rimuovere gli spillacci dal sacco e inserirle nella fibbia più appropriata, quindi ricollegare le due fibbie dietro lo schienale. Le fibbie sono attaccate saldamente quando si sente un clic.

11. **REGOLAZIONE POGGIA GAMBE:** Il poggia gambe può essere regolato in 2 posizioni diverse. Per abbassare il poggia gambe, tirare le due leve laterali verso il basso e contemporaneamente abbassare il poggia gambe. Per sollevare il poggia gambe, spingerlo verso l'alto fino a quando non scatta in posizione.

**REGOLAZIONE SCHIENALE:** Lo schienale può essere regolato in 3 posizioni: Per abbassare lo schienale, sollevare le leve su entrambi i lati allo stesso tempo e abbassarlo, bloccandolo nella posizione desiderata. Per sollevare lo schienale, spingerlo verso l'alto.

12. **CHIUSURA:** Tirare una leva seguita dalla seconda leva verso l'alto fino a sentire loro click (fig\_A); quindi afferrare la maniglia centrale (fig\_B) e tirarla verso l'alto fino alla chiusura del passeggino. Una volta piegato, il passeggino si mantiene in piedi (fig\_C).

13. **TRASPORTO:** Il passeggino può essere trainato (con le ruote anteriori impostate fisse) dalla maniglia centrale (fig\_A). Può anche essere trasportato dalla maniglia laterale (fig\_B).

14. **SFODERABILE:** Per rimuovere il rivestimento dal passeggino, sganciare i fermi sulla parte posteriore dello schienale (fig\_1), far passare il dispositivo sparti gambe sotto il sedile (fig\_2), allentare le due viti (su entrambi i lati) con un cacciavite (fig\_3).

15. Sganciare l'elastico dal telaio (fig\_4), sganciare il telaio (fig\_5, vedi paragrafo APERTURA, punto 1), e far scorrere la seduta dal telaio (fig\_6).

16. Far scorrere la seduta fuori dalla pedana (fig\_7) ed estrarre l'imbottitura verso l'alto (fig\_8).

17. **ACCESSORI:** Questo passeggino possono includere alcuni accessori come copri gambe e parapioggia come indicare fig\_a-bc.

## PULIZIA E MANUTENZIONE

 
**MANUTENZIONE DEL PRODOTTO:** Proteggere dagli agenti atmosferici: acqua, pioggia o neve; prolungata esposizione continua alla luce solare può dare luogo a cambiamenti di colore di vari materiali diversi; conservare il prodotto in un luogo asciutto.

**PULIZIA DEL TELAIO:** periodicamente pulire tutte le parti in plastica con un panno umido. Non utilizzare prodotti di pulizia a solvente o simili; mantenere tutte le parti metalliche asciugare per prevenire la ruggine; tenere pulite le parti in movimento (meccanismi di adeguamento, i meccanismi di bloccaggio, ruote ...) e prive di polvere e sabbia e, se necessario, lubrificare con olio leggero per macchinari.

**PULIZIA DEL PARA PIOGGIA:** Usare una spugna e lavare con acqua e sapone delicato; non utilizzare detersivi.

**PULIZIA PARTI IN TESSUTO:** Spazzolare le parti in tessuto per rimuovere la polvere e lavare a mano, ad una temperatura massima di 30 ° C; non strizzare; non usare candeggina, non stirare; non lavare a secco; non si applicano smacchiatori a base di solventi e non lavare a secco in asciugatrice.

Ci sono 5 simboli all'ultimo in questo manuale.



Imported by or on behalf of:

Wincenzo & Partners S.r.l. Via Lazzaroni Giuseppina, 4, 20124 Milano, Italy IT09176670967 info@zibos.it  
Made in China

# Warranty Registration Card

To register for your 12 month warranty, complete this warranty card and return it within 7 days of purchase to warranty@zibos.it

**Name**

---

**Address**

---

**Postcode**

---

**Phone**

---

**Email**

---

**Product Name / Model No.\***

---

**Colour**

**Serial N.\***

---

**Place of Purchase**

---

**Date of Purchase \***

---

**Stamp, date and signature of the seller shop\***

\* The data are necessary; without any of them the warranty will NOT be valid.

**zibos**  
ITALY DESIGN

# Warranty

## Warranty Terms and Conditions

Subject to the following, Zibos warrants that:

- 1 This product complies with all safety requirements.
- 2 This product is free from defects in workmanship and material under normal use for 12 months from the date of purchase, as recorded on the invoice ('warranty period'). In the event of a defect during the warranty period, you are requested to contact your retailer or place of purchase.

Subject to the following, the warranties do not apply in the following circumstances:

1. Where the product is not supplied to Zibos Brands or an authorised repair agent with the original sales receipt.
2. The defect is the result of use of the product not in accordance with the instructions given in any manual or instructions supplied with this product (including, but not limited to, where the maximum weight allowance specified for the product has been exceeded), or maintenance that is contrary to the instructions given in any manual or instructions supplied with this product.
3. Damage caused directly or indirectly by repairs that have been carried out by you and any third party (excluding authorised repair agents).
4. Where the defect is discolouration, damage to the fabric or watermarks due to washing that has not been in accordance with the instructions given in any manual or instructions supplied with this product, exposure to rainwater, or exposure to sunlight.
5. The defect is as a result of accidental damage.
6. The defect is as a result of damage caused to the product by negligent transportation of the product other than by Zibos Brands.
7. Where the product has been damaged through the use of accessories that have not been approved for use by Zibos Brands in relation to the product.

The warranties are non-transferable and may only be invoked by the first owner.

None of the above is intended nor should be interpreted as restricting, modifying, excluding, or having the effect of restricting, modifying or excluding the rights of the consumer in relation to the supply of the product to the consumer.

